HATIYOUTG NUX

### Analog Multi Timer-

# MA4N

### INSTRUCTION MANUAL

We appreciate you for purchasing HanYoung NUX Co.,Ltd product. Before using the product you have purchased, check to make sure that it is exactly what you ordered. Then, please use it following the instructions below

#### **MAIN PRODUCTS**

- DIGITAL: Temperature Controller, Counter, Timer, Speedmeter,

Tachometer, Panel Meter, Recorder

- SENSOR : Proximity Sensor/Photo Electric Sensor, Rotary Encoder, Optical Fiber Sensor,

Pressure Sensor

- ANALOG: Timer, Temperature Controller

#### **HEAD OFFICE**

1381-3, Juan-Dong, Nam-Gu Incheon, Korea TEL: (82-32)876-4697 FAX: (82-32)876-4696

### ■ Safety information

Before you use, read safety precautions carefully, and use this product properly. The precautions described in this manual contain important contents related with safety; therefore, please follow the instructions accordingly. The precautions are composed of DANGER, WARNING and CAUTION.



# DANGER

There is a danger of occurring electric shock in the input/output terminals so please never let your body or conductive substance is touched.




# WARNING

- 1. This product does not contain an electric switch or fuse, so the user needs to install a separate electric switch or fuse externally. (Fuse rating: 250V 0.5A)
- 2. To prevent defection or malfunction of this product, supply proper power voltage in accordance with the rating
- 3. To prevent electric shock or malfunction of product, do not supply the power until the wiring is completed.
- 4. Since this product is not designed with explosion-protective structure, do not use it any place with flammable or explosive gas.
- 5. Do not decompose, modify, revise or repair this product. This may be a cause of malfunction, electric shock or fire.
- 6. Reassemble this product while the power is OFF. Otherwise, it may be a cause of malfunction or electric shock.
- 7. If you use the product with methods other than specified by the manufacturer. there may be bodily injuries or property damages
- 8. Due to the danger of electric shock, use this product installed onto a panel while an electric current is applied.




- 1. The contents of this manual may be changed without prior notification.
- 2. Before using the product you purchased, make sure that it is exactly what you ordered.
- 3. Make sure that there is no damage or abnormality of the product during delivery.
- 4. Do not use this product at any place with corrosive (especially noxious gas or ammonia) or flammable gas.
- 5. Do not use this product at any place with direct vibration or impact.
- 6. Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron contents. (Use at Pollution level 1 or 2)
- 7. Do not polish this product with substances such as alcohol or benzene
- 8. Do not use this product at any place with a large inductive difficulty or occurring static electricity or magnetic noise.
- 9. Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation.
- 10. Install this product at place under 2,000m in altitude.
- 11. When the product gets wet, the inspection is essential because there is a danger of electric leakage or fire.
- 12. If there is excessive noise from the power supply, using insulating transformer or noise filter is recommended. The noise filter must be attached to a panel which is already connected to a ground and the wire between the filter output and power supply terminal must be as short as possible.
- 13.If puttig power cables closely together then It is effective against noise.
- 14.Do not connect anything to the unused terminals.
- 15. After checking the polarity of terminal, connect wires at the correct position.
- 16. When this product is connected to a panel, use a circuit breaker or switch approved with IEC947-1 or IEC947-3
- 17.Install the circuit breaker or switch at near place for convenient use.
- 18. Write down on a label that if the circuit breaker or switch is operating then the power will be disconnected since the circuit breaker or switch is installed.
- 19. For the continuous and safe use of this product, the periodical maintenance is recommended
- 20. Some parts of this product have limited life span, and others are changed by
- 21. The warranty period for this product including parts is one year if this product is properly used.

## ■ Names and functions of respective parts

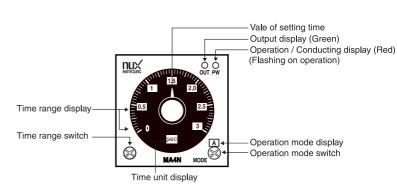

#### ■ Selection of operation mode

Please select operation mode by turning of operation mode switch in front of panel. User can select 6 types of operation modes Operation mode is displayed as like A, B. C. D. E. F or A1, B1, C1, D1, E1, F1.

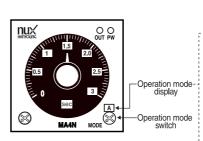


	MODE	Function of operation			
-•	Α	ON DELAY			
	В	FLICKER OFF START			
	С	INTERVAL			
	D	SIGNAL ON/OFF DELAY			
	Е	SIGNAL OFF DELAY			
	F	FLICKER ON START			

MA4N -A, MA4N - B TYPE

MA4N - C TYPE				
MODE	Function of operation			
A1	ON DELAY			
B1	ON DELAY1			
C1	ON DELAY2			
D1	FLICKER OFF START			
E1	FLICKER ON START			
F1	INTERVAL			
	MODE A1 B1 C1 D1 E1			

#### ■ Selection of Time unit

Please select time by turning of Time range switch Use can select 16 types of time ranges and it is displayed as like sec, min, hrs, 10h

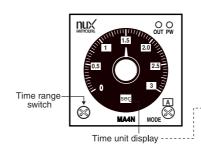

-	Time unit	Time range		
		0, 0.2, 0.4, 0.6, 0.8, 1.0, 1.2		
	sec, min, hrs, 10h	0, 0.5, 1, 1.5, 2, 2.5, 3		
	500, 11111, 1110, 1011	0, 2, 4, 6, 8, 10, 12		
		0, 5, 10, 15, 20, 25, 30		


# **■** Time range

Time unit Max. time		sec	min	hrs	×10h
	1. 2	0.12 ~ 1.2		1.2 ~ 12	
Cotting range	3	0.3 ~ 3		3 ~ 30	
Setting range	12	1.2 ~ 12		12 ~ 120	
	30	3 ~ 30		30 ~ 300	


# ■ Specifications

N	1 o d e	MA4N-A	MA4N-B	MA4N-C		
	ly voltage	24 - 240 V a.c/d.c 50 - 60 Hz				
	e regulation	±10% from supply voltage				
	consumption	4.4 V A (240 V a.c), 2.1 W (240 V d.c)				
	etting time	Max. 0.1 sec				
START Inpu						
MinSignal	INHIBIT Input	Min.	_			
length	RESET Input					
	START Input	Non voltage input Impedance in a short circui t: Max. 2 MΩ Residual voltage in a short circuit:  Max. 0.7 V d.c Impedance in open: Min. 100 MΩ				
Input condition	INHIBIT Input					
Condition	RESET Input					
Output		Time Limit contact 2c	Time Limit contact Instautaneousconta 1c	1c Time Limit 2c		
		N.C: 3 A 125 V a.c, 2 A 250 V a.c, 1A 30 V d.c				
Sett	ting error	Max. ± 5 % ±0.05 sec				
Rep	eat error	Max. ± 0.3 %				
Tempe	erature error	Max. ± 2 %				
Insulation	on resistance	Min. 100 MΩ (Base on 500 V d.c)				
Dielec	tric strength	2000 V a.c 50/60 Hz for 1 min.				
Impu	lse voltage	± 2000 V Max.				
	Mechanical durability	10-55H	ide0.75mm			
Vibration	Malfunction durability	10-55Hz double amplitude0.5mm				
	Mechanical durability	3	300 ‰ (Approx. 3	0 ‰ (Approx. 30G)		
Shock	Malfunction durability	100 % (Approx. 10G)				
Life	Mechanical	Over 10 million oper	ort frequency : 180/min)			
expectancy	Electrical	Over 100,00	load resistance)			
Terminal type		Socket type	Socket type 11 Pin Socket type 8			
•	ion ambient	-10 ~ 55 °C (No condensation)				
Conservat	ion temperature	-20 ~ 65 ℃ (No condensation)				
Operation a	ambient humidity	35 ~ 85 %RH				
V	Veight	About 100g (Including fixing bracket)				
		3 ( 3 ) 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3				


# **■** Dimensions

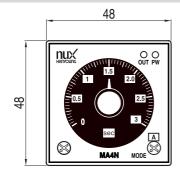

(unit: mm)

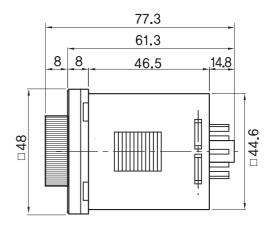


# **■** Panel cutout

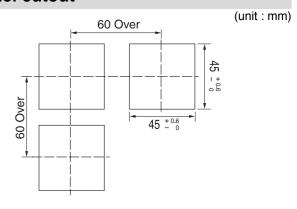


# **■** Connections

### ■ MA4N-A / MA4N-B

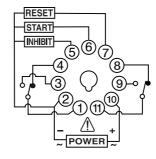

- · MA4N-A: 2 relay work as Time limit.
- MA4N-B: The relay connected ①, ③,
   work as Instantaneous and othrealys work astime limit.
- $\frak{\#}$  Please refer to Timing charts for working of relays


#### ■MA4N-C

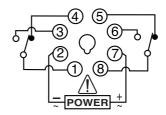

- ·Two relays in Mode A1 and D1 work as Time limit.
- The relays in Mode B1, C1, E1, F1 connected 1, 3, 4 work as Instantaneous. And other realys work as time limit.
- \*MA4N-C : According to timing charts, relays works as Time limit or Instantaneous.
  \*Please refer to Timing charts for working of relays.

# **■** Timing charts (MA4N-A, MA4N-B)

\*\*MA4N-A: OUTPUT – TIME LIMIT 2c MA4N-B: OUTPUT – Instantaneous 1C, Time limit 1c

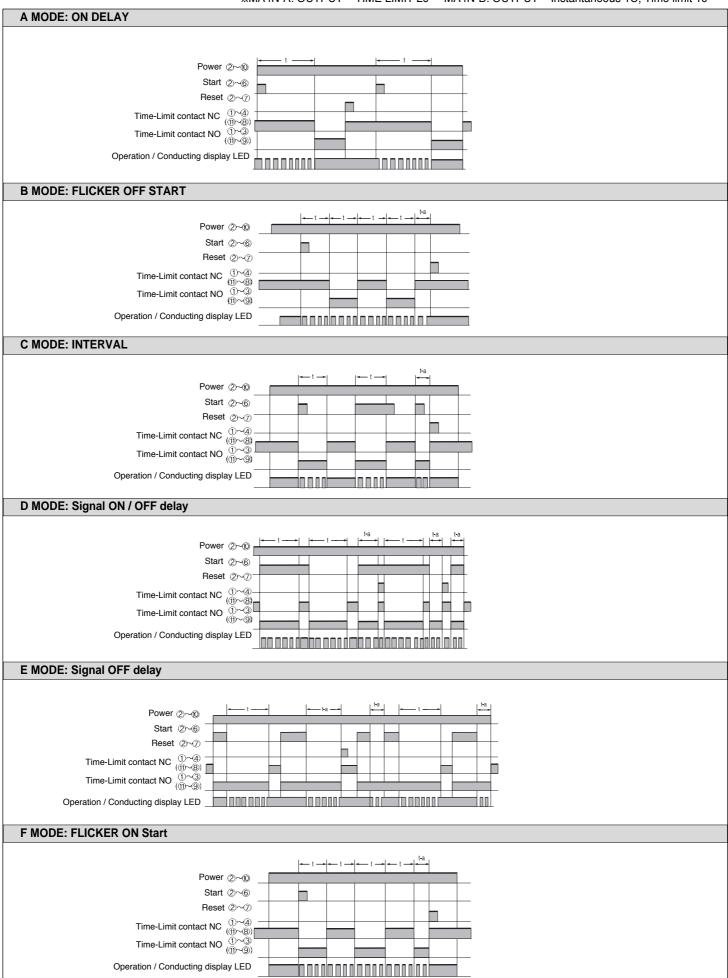

# ■ Timing charts (MA4N-C)

t: Setting time, t-a: Within setting time, Rt: Resetting time

